



Tel: +48 52 371 55 76
Tel: +48 52 371 91 95
Fax: +48 52 371 91 99

www.jmpinter.com
export@jmpinter.com

JMP International Sp. z o.o., ul. Czyżykowa 9, 85-449 Bydgoszcz, POLAND

PERSONAL PROTECTION EQUIPMENT
„TEMPORARY CLASS B ANCHORAGE” CONFORMS TO THE STANDARD EN 795 CLASS B
„POSITIONING LANYARD” CONFORMS TO THE STANDARD EN 358
SAFETY LANYARD CONFORMS TO THE STANDARD EN 354

INSTRUCTION FOR USE

RING ST

IMPORTANT POINTS

You have just acquired Personal Protection Equipment (PPE) from INTER JMP International and we thank you for your confidence. In order for this product to meet all your requirements, we ask you BEFORE EACH USE, to follow the instructions in this manual.

Disregarding the instructions described in this manual could give rise to some serious repercussions. We advise that you re-read these instructions from time to time. In addition JMP International declines all responsibility for any use, storage methods or maintenance carried out in any other manner than that described in this manual.

If the buyer is not the end user, it is important that these instructions are given to the latter.

Check that the PPE you have acquired is compatible with the recommendations of all other components of the fall arrest system. It is necessary to be completely sure before use that the recommendations specific to each element associated with this product, such as defined in their instructions, are respected.

Whenever possible, it is strongly advised to personally attribute the PPE to an individual user.

While in use, protect your PPE against all risks connected with the work environment: thermal, electrical, or mechanical shocks, acid discharges, etc...

ATTENTION:

Activities at height are dangerous and can bring about serious accidents and injuries. We remind that you are personally responsible in the case of an accident, injury or fatality to either yourself or a third party during or following the use of one of our products. It is recommended that training in the use of our products is done under the supervision and instruction of a competent and experienced person. Ensure that you have been adequately trained in the use of this PPE and make sure that you have fully understood how it works. If there is any doubt, do not take any risks but seek advice.

A good physical condition is obligatory in order to carry out work from a height.

USE

Follow the instructions of the manufacturer showed on the pictures (2, 3 and 4)

This class B anchorage has been tested in accordance with EN 795

Be sure to comply with the recommendations for use of any other equipment that is used in conjunction with this anchorage.

INSTRUCTION FOR USE AS POSITIONING LANYARD

Follow the instructions of the manufacturer showed on the pictures 5-6

A positioning lanyard is intended for work at height on posts or other such structures. It allows oneself to be in position and have ones hands free so as to undertake the task in hand. The adjustable lanyard must be used with a belt harness or a work positioning belt. It must not be used to stop falls.

1) Absence of the start of any breakage in the rope, 2) Absence of any deforming of the thimbles, 3) the reliability of the splice, 4) Absence of any deterioration (tearing, excessive use, burning, etc.) of the rope or the webbing, 5) Absence of any deterioration or use of the connectors, 6) The smooth working of the connectors.

IN THE CASE OF DOUBT THE PPE MUST BE REMOVED FROM SERVICE IMMEDIATELY

USE:

- . Connect the extremity of the adjustable lanyard to one of the „D” rings (the adjustable element can either be connected to the right or left side „D” ring).
- . Pass the positioning lanyard behind the structure (post, trunk etc.) and buckle the second extremity on the other „D” ring.
- . Before climbing, test functioning of the work position system.
- . Check that the geometry of the structure allows the use of a positioning system (structures with small diameters and exposed edges must be prohibited).
- . Take the lanyard so long as to work comfortable,
- . In the work position the adjustment of the positioning lanyard must not allow a free fall of a distance superior to 0,5m. It is necessary to use a belt equipped with a comfort pad when the work position must be maintained for a long time.

RESTRICTIONS ON USE OF SAFETY LANYARDS

Safety lanyards without energy absorber cannot be used as a part of or fall arrest system. Energy absorber is component of absorbing device of fall arrest equipment. Safety harnesses with safety lanyard and energy absorber can be used as a fall arrest equipment. Follow the instructions of the manufacturer showed on the picture 3a and 4.

Important recommendations:

Before each use, it is advisable to carry out an in-depth visual examination in order to assure the integrity of the PPE. Any PPE that has been subjected to a fall must not be used.

Never try to modify or repair a piece of PPE yourself; only the manufacturer or a repair centre are able to carry out these repairs. These instructions must be kept with the product.

IMPORTANT:

This PPE must be examined at least once a year by the manufacturer or by a certified person. The check must be recorded on the sheet which can be found in the appendix.

Anchorage point:

It is preferable to use an anchorage point situated above the user. If possible use structural anchorage points that conform to the standard EN-795 intended for this purpose. The resistance of the anchorage point must, in all cases, be superior to 10 KN and :

- Be situated above the operator
- In the vertical axis to the work surface. Maximum angle +/- 30°

MAINTENANCE AND STORAGE

Good maintenance and storage of your PPE will prolong the working- life of your product, while ensuring your safety:

- The PPE should be cleaned with water and mild soap. Never use acid, solvents or anything based on this.
- The lifetime is depending on frequency and conditions of using. For determination of life time user have to cheque product and to evaluate eventual damage according to the previous chapters
- Leave it to dry in a well ventilated area, away from sources of heat. Store the harness away from humidity ultraviolet light.
- Avoid any corrosive atmosphere and excessive heat or cold.

Manufacturer: JMP International Sp. z o.o., ul. Czyżykowa 9, 85-449 Bydgoszcz, POLAND

A conformity assessment was performed by notified body 1019 VVUU Czech Republic

A conformity of quality management system is performed by notified body 1019 VVUU Czech Republic

